102995 May 20, 2026 | D

Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130-3045
830-629-2900 / 800-729-3839 / Fax 800-653-3839 / Text photos only: 830-323-0431 / INTERNET: www.detex.com

INSTALLATION INSTRUCTIONS FOR DETEX VALUES SERIES NARROW TRIM

Drawing: 102993
102996
105780

Table of Contents


Page
Device parts breakdown view..... 2
Trim preparation, 08/09/14 trim re-handing (if required)..... 3
02 trim re-handing (if required) 4

Should you have a Question/Problem with your Detex device please call Detex Technical Support from the job site at 1-800-729-3839 and choose option 2 on our menu. Please do not return the product to the distributor.

For WARRANTY information, scan code below or go to www.detex.com/warranty

For device installation videos, scan code below or go to www.detex.com/videos

Owner's Copy

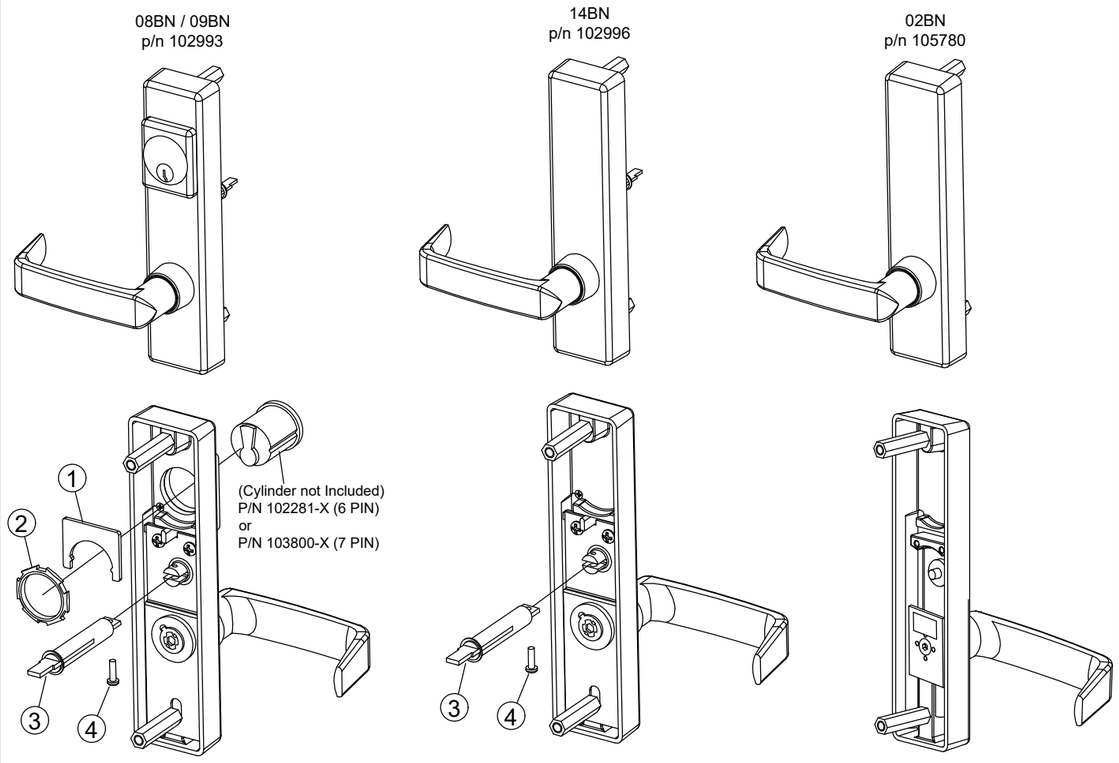


Left Hand Reverse (LHR) levers shown

ITEM	P/N	QTY	DESCRIPTION
1	100868	1	Mortise cylinder position plate
2	100783	1	Cylinder hex nut
3	101478	1	Shaft extension
4	PP-5367-108	1	Screw, 6-32 x 1/2"

FOR 1-3/4" TO 2-1/4" THICK DOORS (OPTIONAL KIT, P/N 101061-X FOR THICKER DOORS)

Door Prep for Trim and Mounting Plate

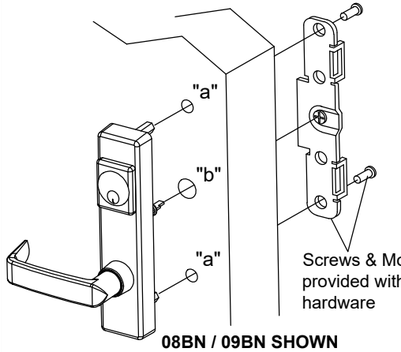


Screws & Mounting Plate provided with panic hardware

08BN / 09BN SHOWN
08BN / 09BN / 14BN require holes "a" & "b"
For 02BN, no hole "b" required

HOLES "a"
METAL DOOR: INSIDE Ø5/16" OUTSIDE Ø1/2"
WOOD DOOR: Ø1/2" THRU DOOR
HOLE "b"
ALL DOORS: Ø3/4" THRU


L161 Door Prep for Trim and Mounting Plate

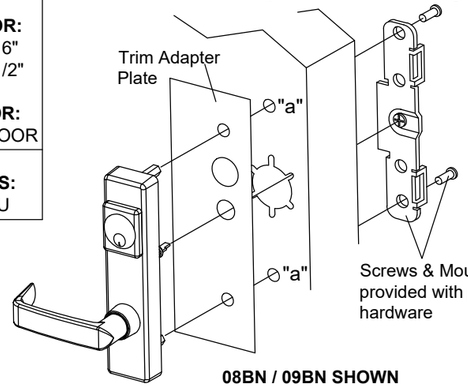

Screws & Mounting Plate provided with panic hardware


08BN / 09BN SHOWN

TO CHANGE LEVER HANDING ON 08BN / 09BN / 14BN TRIMS

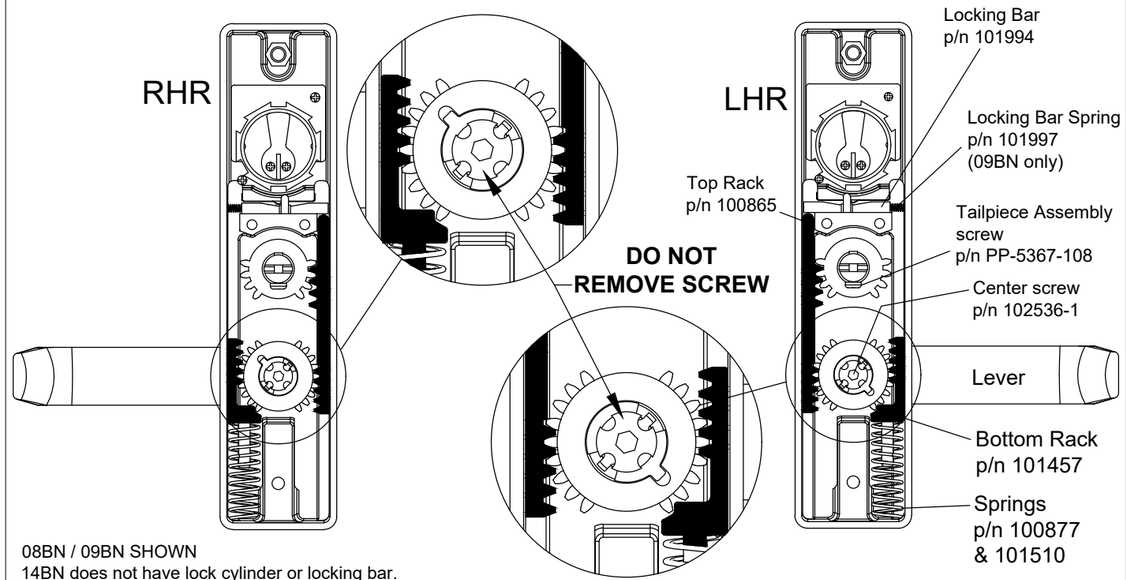


08BN / 09BN SHOWN
14BN does not have lock cylinder or locking bar.
Before removing Top and Bottom Racks, note tooth positions. If excessive play exists on handle, confirm tooth alignment.

A. Remove tailpiece assembly screw. (remove assembly if necessary)
B. Remove hex standoff and two (2) screws holding spring retaining plate.
WARNING: Springs under pressure! Protective eyewear required.
C. Remove Spring Retaining Plate.
D. (09 Function only) Move Lock Bar spring to opposite side.
E. Carefully remove springs and bottom rack.
F. Remove top rack.
G. Rotate lever to opposite side.
H. Engage bottom rack on the opposite side as shown.
I. Engage top rack on the opposite side as shown.
J. Install springs on bottom rack. **WARNING**: Springs under pressure!
K. Replace Spring Retaining Plate, hex standoff and screws.
L. Replace tailpiece assembly screw.

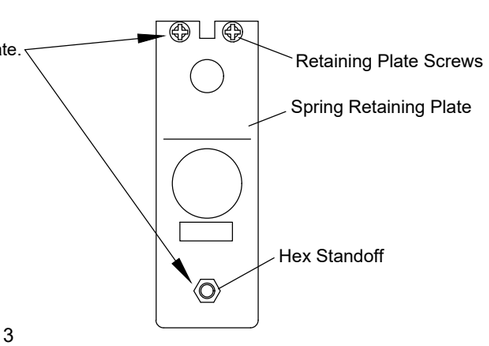

Handing Complete

TO CHANGE LEVER HANDING 02BN

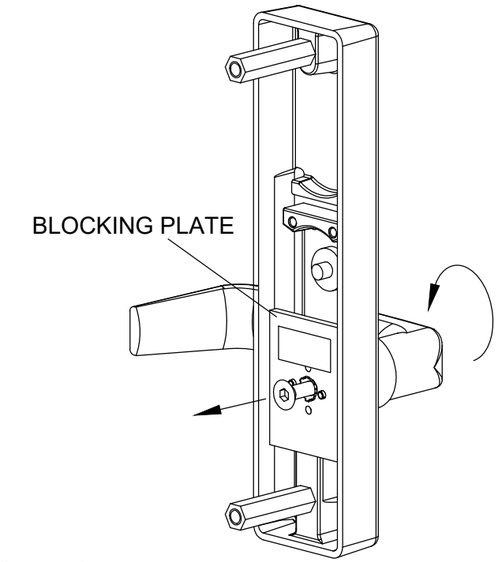

A. Use 1/8" allen wrench to remove screw.
B. Pull back on BLOCKING PLATE. CAUTION: Do not lose the brass shear pin located behind plate.
C. Turn handle 180°, align holes in plate with pins on inside collar.
D. Reinstall screw & lockwasher.

Handing Complete