

SHUTIt® Making Hinge Adjustments

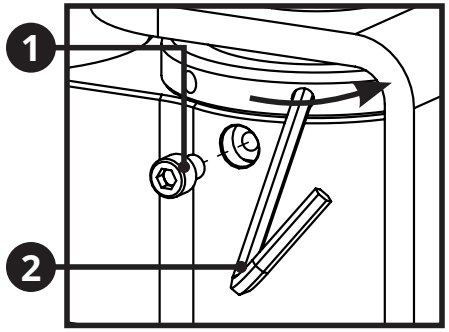

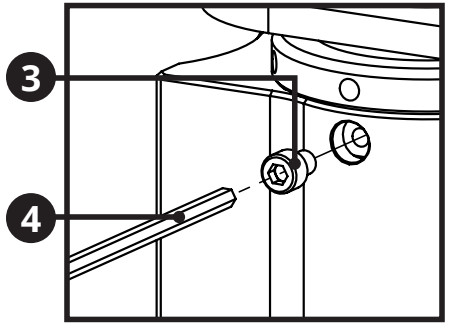

Tension Adjustment

1. Using the hex socket wrench, remove the Tension Locking screw located on the body of the Self-closing Badass Hinge.
2. Insert the hex wrench into one of the three tension adjustment guide holes. Rotate toward the hinge yoke.
   NOTE: It may be necessary to loosen the lock nut on the Self-closing Hinge to rotate the spacer
3. Re-insert the Tension Locking screw with fingers.
4. Tighten the Tension Locking screw fully.

Gate Gap Adjustment

Most Shut-It hinges are adjustable (even when welded) and have a 0.5” horizontal adjustment. To prevent slippage, the locknut should be tightened to 50 ft-lbs.

Restrictions

Disassembling hinge will void warranty (Warranty not voided if yoke and body of hinge are separated for welding). Hinge is not designed to be powder coated.

MKT-249-0924