
OVS-01GT Vehicle Presence Sensor Installation Guide

Application

Gate type: Sliding

Function of sensor: Vehicle Protection


Recommended settings for standard **Vehicle Protection** application (yellow ovals):

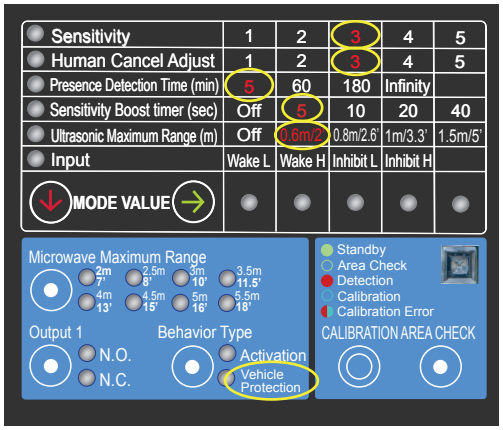




Settings above are typical and should work for most Safety Loop applications. Set Microwave Max. Range and Output based on the individual environment; other adjustments may be required. Should you experience any issues, contact Technical Support at (800) 877-6656.

Standard Slide Gate Layout

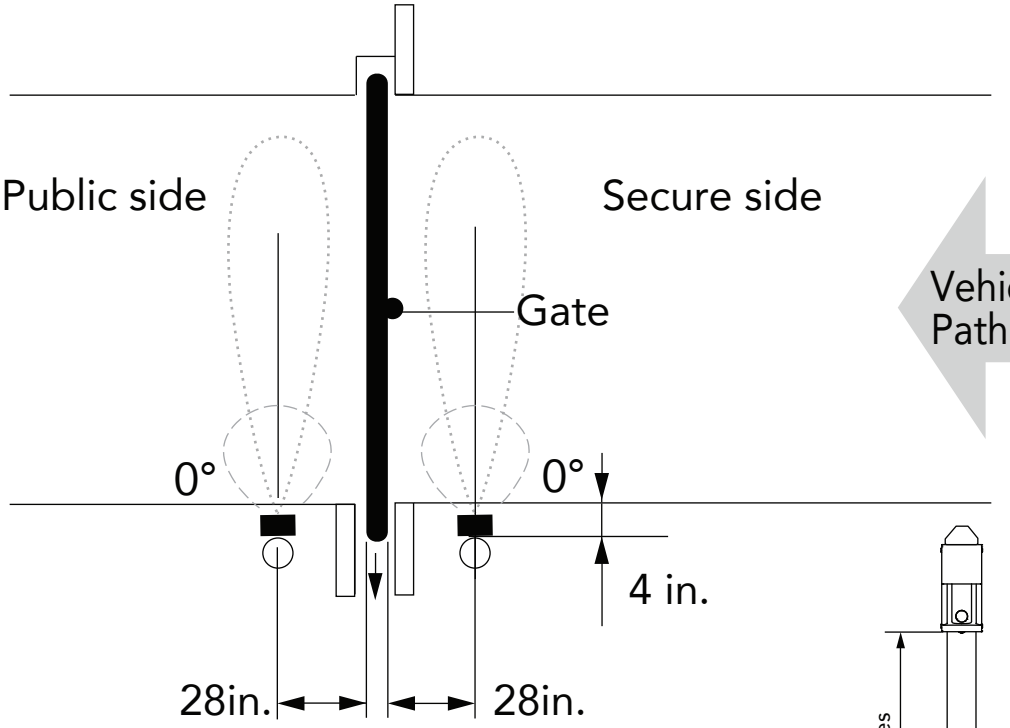

Mounting height: 20" above road surface
Distance from moving gate: 28" for best result
Angle adjustment: 0° at 28". If mounting closer than 28" from gate, slight angle may be required.

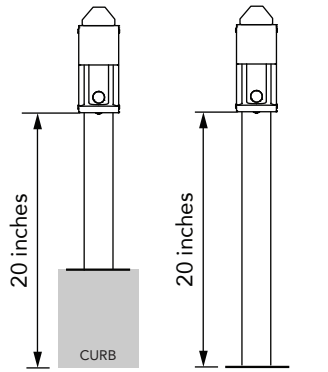

OVS-MPYcurb (yellow) OVS-MPBcurb (black)
OVS-MPY (yellow) OVS-MPB (black)

Notes

Calibration: Sensor should be calibrated before walk testing and after any changes are made (hold calibration for 2 seconds to initiate).

Area check: Use area check to verify detection area. This is a walk test function that allows you to see the detection area without the use of a vehicle.

Please refer to the enclosed manual for additional information.

OPTEX Inc.
18730 S. Wilmington Ave, Unit 100
Rancho Dominguez, CA 90220
Ph 800 877-6656 | Fax 310 898-1098
www.optex-vs.com

East Coast Office:
8510 McAlpine Park Dr. Suite 108
Charlotte, NC 28211